



www.onida.com
Email: response@onida.com

For INDIA

3988 9000

Prefix State Capital STD Code


1-800-3009-9000



DESIGNED WITH YOU IN MIND
MIRC Electronics Ltd.,

Onida House, G-1, MIDC, Mahakali Caves Road, Andheri (East), Mumbai – 400 093, India.

USER MANUAL

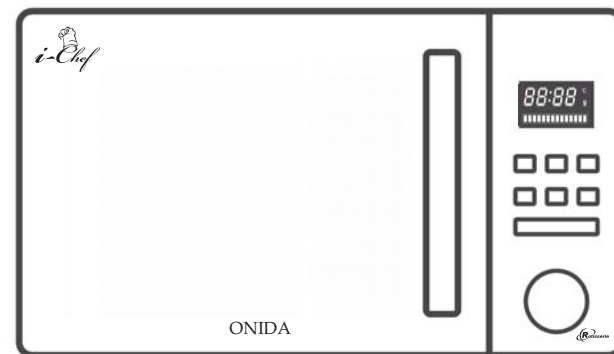

123 Indian Easy-Recipes with Calorie Display

Including North Indian, South Indian, Bengali, Gujarati
Maharashtrian, Rajasthani, Punjabi & International Menus
Desserts & Much more .

& Unique Glowing Buttons Guide

Rotisserie
30L



DESIGNED WITH YOU IN MIND

Help us to serve you better.

Please fill out the Warranty Registration form

& hand it over to our Representative at the

ONIDA Customer Service Centre.

This will go a long way in helping us serve

your needs.

CONTENTS

1. Salient Features	2
2. Inside Microwave Oven	3
3. Installation	
A. Installation of Microwave	4
B. Turntable Installation	4
4. Important Safety Instructions	5
5. Precautions	6
6. Material you can use in Microwave Oven	7
7. Material to be avoided in Microwave Oven	8
8. Barbecue Skewer Installation	9
9. Control Panel	10
10. How to set the Oven controls	11 -15
11. 123 Easy Menu Chart	16 -19
12. Special Features	20
13. Specifications	21
14. Trouble Shooting	22
15. Warranty terms and conditions	23 - 24
16. Warranty Card	25 - 27
12. Cleaning and Care	28
13. Service Center List	29

Read the User Manual carefully before installing and operating the microwave oven.

Record in the space below the SERIAL NO. found on the name plate of your Microwave Oven & retain this information for future reference.

Salient features of



1. **30 L Barbecue with Black Finish**
2. **123 Indian Easy-Recipes with Calorie Display**
Including North Indian, South Indian, Bengali, Gujarati, Maharashtrian, Rajasthani, Punjabi & International menus, Desserts & much More.
3. **Unique Glowing Buttons Guide**
4. **Mobile Enabled Recipes**
5. **Steam Clean**
6. **Motorized Rotisserie / Barbecue**
7. **Keep Warm Auto Defrost**
8. **Deodorizer**
9. **4 Combi settings**
10. **10 Baking Temperatures**
11. **900 Watts Microwave power**
12. **1300 Watts Grill power + 1600 W Convection power**
13. **Jog wheel Controls**
14. **Stainless steel cavity**
15. **Multistage Cooking**
16. **Express Cooking**
17. **Child Lock**

Accessories :-

- Motorized Rotisserie skewer & Handle
- Crispy Tray
- Grill Stand
- Turntable


* Free Cookware , Cook book & Magnetic Recipe book

INSIDE MICROWAVE OVEN


NAMES OF OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton. Your oven comes with the following accessories:

- | | |
|----------------------------|---|
| a. Glass tray | 1 |
| b. Turntable ring assembly | 1 |
| c. Grill Stand | 1 |
| d. Crispy Tray | 1 |
| e. Barbecue Skewer | 1 |
| f. Instruction Manual | 1 |

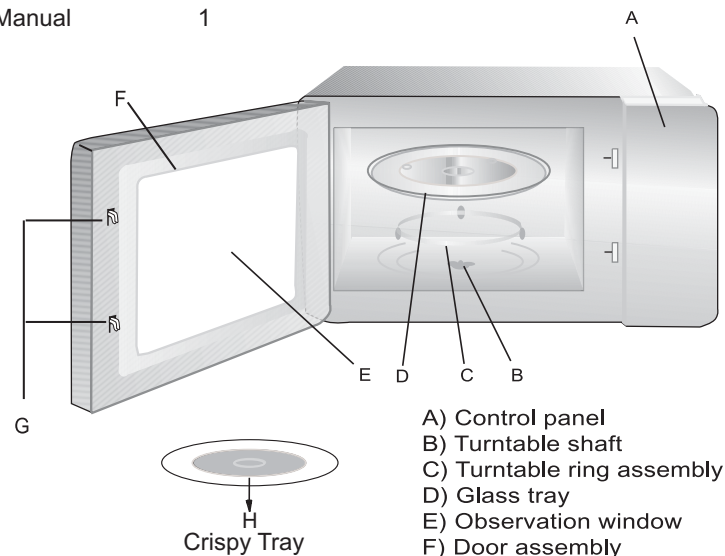

- A) Control panel
B) Turntable shaft
C) Turntable ring assembly
D) Glass tray
E) Observation window
F) Door assembly
G) Safety interlock system
Shut off oven power if the door is opened during operation.
H) Crispy Baking Plate

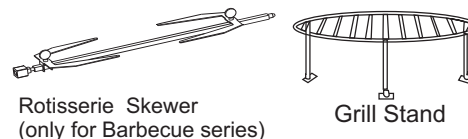

Rotisserie Skewer
(only for Barbecue series)

Grill Stand

INSTALLATION OF MICROWAVE OVEN

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.


Countertop

Do not remove the Light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provides enough open space for the intake and/or Outlet vents.


A minimum clearance of 3.0 inch (7.5 cm) is required between the oven and any adjacent wall. One side must be open.

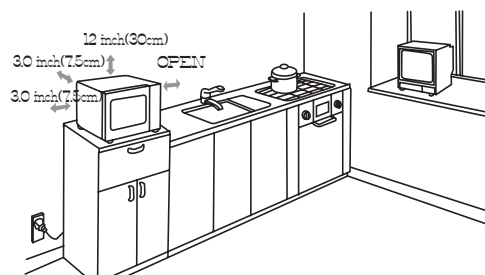

- (1) Leave a minimum clearance of 12 inch (30cm) above the oven.
 - (2) Do not remove the legs from the bottom of the oven.
 - (3) Blocking the intake and/or outlet openings can damage the oven
 - (4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

TURNTABLE INSTALLATION

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food should be always placed on the glass tray for cooking.
- d. The glass tray rotates clockwise; this is normal.
- e. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service Centre.

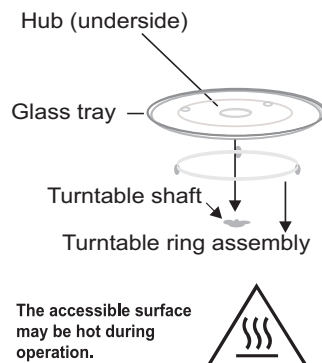

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. **Warning:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. **Warning:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. **Warning:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understand the hazards of improper use.
4. **Warning:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated. (only for grill series)
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. Use this appliance only for its intended uses as described in manual. Do not use corrosive chemicals or vapors in this appliance. This oven is especially designed to heat. It is not designed for industrial or laboratory use.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any events on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
27. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
28. **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
29. Accessible parts may become hot during use. Young children should be kept away. Steam cleaner is not to be used.
30. Surface of a storage drawer can get hot.
31. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
32. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
33. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
34. The rear surface of appliance shall be placed against a wall.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

MATERIAL YOU CAN USE IN MICROWAVE OVEN

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

MATERIALS TO BE AVOIDED IN MICROWAVE OVEN

Utensils	Remarks
Aluminum tray	: May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	: May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed Utensils	: Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	: May cause arcing and could cause a fire in the oven.
Paper bags	: May cause a fire in the oven.
Plastic Foam	: Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	: Wood will dry out when used in the microwave oven and may split or crack.

Cookware / UTENSILS	Microwave	Grill	Convection	Combination*
Heat Resistant Glass	Yes	Yes	Yes	Yes
Non Heat Resistant Glass	No	No	No	No
Heat Resistant Ceramics	Yes	Yes	Yes	Yes
Microwave Safe Plastic Dish	Yes	No	No	No
Kitchen Paper	Yes	No	No	No
Metal Tray	No	Yes	Yes	No
Metal Rack	No	Yes	Yes	No
Aluminum Foil & Foil Container	No	Yes	Yes	No

Utensil Test , if any doubt :-

You can test the utensil in question following the procedure below:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.



CAUTION

Personal Injury Hazard: Tightly-closed utensils could explode. Closed containers are opened and plastic pouches pierced before cooking.

* Combination: applicable for both "microwave+grill", and "microwave+connection" cooking.

ROTISSERIE SKEWER INSTALLATION


After putting the food on the barbecue skewer , firstly, connection part 1 of the barbecueskewer should be aimed at the shaft of the rotary motor. Then the shaft is put into the hole of the connection part 1. Secondly, put the supporting part 2 of the barbecue skewer to the upside of the barbecue skewer which is on the profile of the cavity. There is a semicircular position in the middle of the supporting part, the food can be put on it.

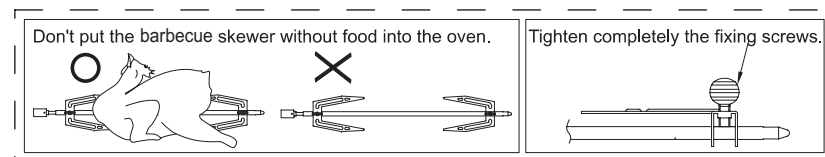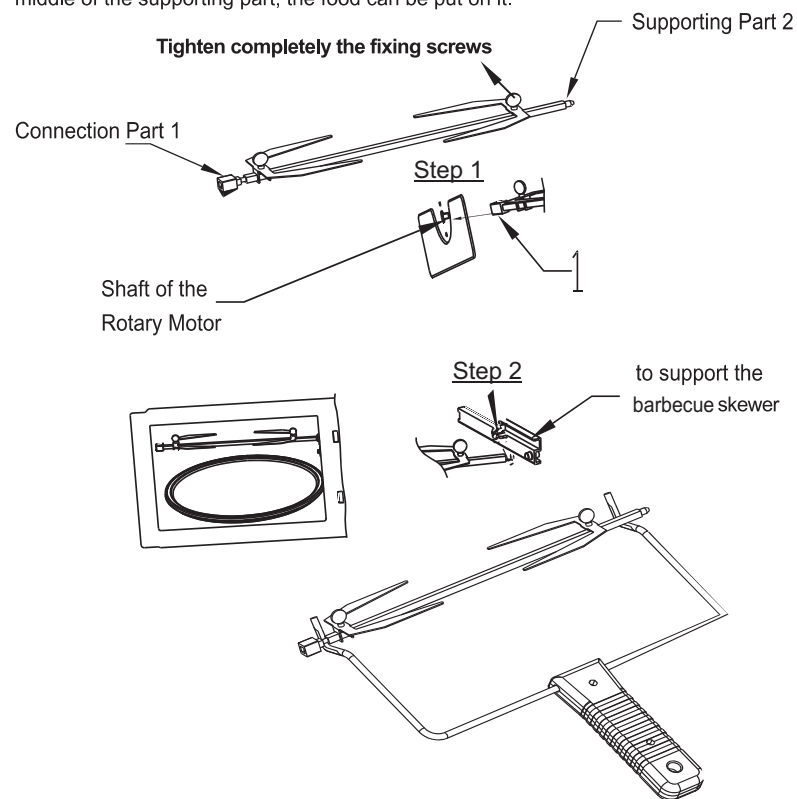

OPERATION

1. Use the Rotisserie Skewer in Grill & Conv mode only
2. Max Weight on the Skewer must not be more than 1.5 kg.

Control Panel

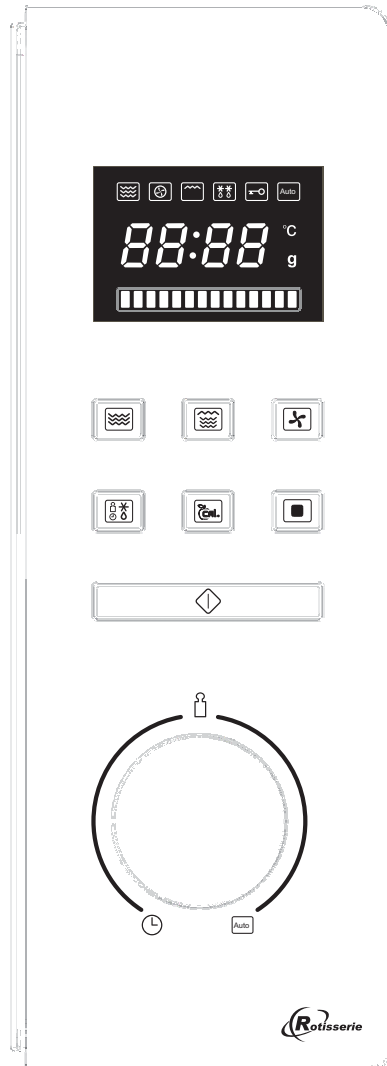

 Microwave

 Grill/combine

 Convection

 Weight/Time Defrost

 Calorie meter

 Stop/Clear

 Start/
+30Sec./Conrm

 Weight

 Timer

 Auto Menu

Operating Procedure

This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

1. Microwave Cooking

Press " **Microwave** " the LED will display "P100". Press " **Microwave** " for times or turn "  " to choose the power you want, and "P100", "P80" "P50", "P30 " or "P10" will display for each added press. Then press " **START/+30SEC./CONFIRM** " to confirm, and turn "  " to set cooking time from 0:05 to 95:00. Press " **START/+30SEC./CONFIRM** " again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps.

- 1) Press " **Microwave** " once, the screen display "P100".
- 2) Press " **Microwave** " once again or turn "  " to choose 80% microwave power.
- 3) Press " **Start/+30Sec./Confirm** " to confirm, and the screen displays "P 80".
- 4) Turn "  " to adjust the cooking time until the oven displays "20:00".
- 5) Press " **Start/+30Sec./Confirm** " to start cooking .

NOTE: the step quantities for the adjustment time of the coding switch are as follow:

0---1 min	: 5 seconds
1---5 min	: 10 seconds
5---10 min	: 30 seconds
10---30 min	: 1 minute
30---95 min	: 5 minutes

Microwave Power Chart

Press	Once	Twice	Thrice	4 times	5 times
Microwave Power	100%	80%	50%	30%	10%

2. Grill or Combi. Cooking

Press " **Grill/Combine** " the LED will display "G-1", and press " **Grill/Combine** " for times or turn the "  " to choose the power you want, and "G", "C-1", "C-2", "C-3" or "C-4" will display for each added press. Then press " **Start/+30Sec./Confirm** " to confirm, and turn "  " to set cooking time from 0:05 to 95:00. Press " **Start/+30Sec./Confirm** " again to start cooking.

Example: If you want to use grill power to cook for 10 minutes, you can operate the oven as the following steps.

1) Press " **Grill/Combine** " once, the screen display "G-1".

2) Press " **Start/+30Sec./Confirm** " to confirm.

3) Turn "  " to adjust the cooking time until the oven displays "10:00".

4) Press " **Start/+30Sec./Confirm** " to start cooking .

Note: If half the grill time passes, the oven sounds twice, and this is normal.

In order to have a better effect of grilling food, you should turn the food over, close the door, and then if no operation the oven will continue cooking.

Note: Combination instructions

Instructions	Display	Microwave	Grill	Convection
1	C-1	●		●
2	C-2	●	●	
3	C-3		●	●
4	C-4	●	●	●

Note : If C1 or C3 is Selected , you can select Convection Temperatures From 150,180,210,230 deg C

3. Convection Cooking(With preheating function)

The convection cooking can let you to cook the food as a traditional oven. Microwave is not used. It is recommended that you should preheat the oven to the appropriate temperature before placing the food in the oven.

1) Press the " **CONVECTION** " key once, "140" flash.

2) Keep pressing " **CONVECTION** " or turn "  " to select the convection function.

Note: the temperature can be chosen from 140 degrees to 230 degrees.

3) Press the " **START/+30SEC./CONFIRM** " to confirm the temperature.

4) Press the " **START/+30SEC./CONFIRM** " to start preheating. When the preheating temperature arrives, the buzzer will sound twice to remind you to put the food into the oven. And the preheated temperature is displayed and flash.

5) Put the food into the oven and close the door.

Turn "  " to adjust the cooking time. (The maximum setting time is 95 minutes.)

6) Press the " **START/+30SEC./CONFIRM** " key to start cooking.

Note: a. Cooking time cannot be input until the preheating temperature arrives.

If the temperature arrives, door must be opened to input the cooking time.

b. If the time not input in 5 minutes, the oven will stop preheating. The buzzer sound five times and turn back to waiting states.

4. Convection Cooking(Without pre-heating function)

1) Press the " **CONVECTION** " key once, "140" flash.

2) Keep pressing " **CONVECTION** " or turn "  " to select the convection function.

Note: the temperature can be chosen from 140 degrees to 230 degrees.

3) Press the " **START/+30SEC./CONFIRM** " to confirm the temperature

4) Turn "  " to adjust the cooking time. (The maximum setting time is 95 minutes.)

5) Press the " **START/+30SEC./CONFIRM** " key to start cooking.

5. Multi-Stage Cooking

Two stages can be maximumly set. If one stage is defrosting, it should be put in the first stage. The buzzer will ring once after each stage and the next stage will begin.

Note: Auto menu and preheating cannot be set as one of the multi-stage.

Example: if you want to Cook the food for 7 minutes with 80% microwave power , then Grill for 5 Min . The steps are as following:

1) Press " **MICROWAVE** " once;

2) Turn "  " to choose 80% microwave power till "P80" display;

3) Press " **START/+30SEC./CONFIRM** " to confirm;

4) Turn "  " to adjust the cooking time of 7 minutes;

5) Press " **Grill** " once, the screen will display "G-1"

6) Press " **START/+30SEC./CONFIRM** " to confirm;

7) Turn "  " to adjust the Grill time of 5 minutes;

8) Press " **START/+30SEC./CONFIRM** " to start cooking.

6. Speedy Cooking

1) In waiting state, press "**START/+30SEC./CONFIRM**" key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds. The maximum cooking time is 95 minutes.

2) During microwave, grill, convection and combination states, press "**START/+30SEC./CONFIRM**" to increase time by 30 seconds.

Each press on the same key can increase 30 seconds.

Note: this function cannot work under defrost and auto menu cooking.

7. Speedy Microwave Cooking

In waiting state, turn "  " left to choose cooking time directly then press "**START/+30SEC./CONFIRM**" key to cook with 100% microwave power.

This program can be set as one of multi-stage.

8. Defrost by W.T.

1) Press "**WEIGHT/TIME DEFROST**" pad once, the oven will display "dEF1",.

2) Turn "  " to select the weight of food. At the same time, "g" will light. The weight should be 100-2000g.

3) Press "**START/+30SEC./CONFIRM**" key to start defrosting.

9. Defrost by Time

1) Press " **WEIGHT/TIME DEFROST** " key twice, the oven will display "dEF2"

2) Turn "  " to select the cooking time. The maximum setting time is 95 minutes.

3) Press " **START/+30SEC./CONFIRM**" key to start defrosting.

10. Inquiring Function

(1) In pre-set state, press "**CLOCK/PRE-SET**" to inquire the time for delay start cooking.

The pre-set time will flash for 2-3 seconds, then the oven will turn back to the clock display.

(2) During cooking state, press "**CLOCK/PRE-SET**" to check the current time. It will be displayed for 2-3 seconds.

(3) In cooking state, press "**MICROWAVE**", "**GRILL/ COMBINE**" or "**CONVECTION**", the current power will be displayed for 2-3 seconds.

11. Lock-out Function for Children

Lock: In waiting state, press "**STOP/CLEAR**" for 3 seconds, there will be a long "beep" denoting entering into the children-lock state and "  " indicator will light. LED will display current time or 0:00.

Lock quitting: In locked state, press "**STOP/CLEAR**" for 3 seconds, there will be a long "beep" denoting that the lock is released, and "  " indicator will disappear.

12. Specification

(1) The buzzer will sound once when turning the knob at the beginning;

(2) "**START/+30 SEC./CONFIRM**" must be pressed to continue cooking if the door is opened during cooking;

(3) Once the cooking programme has been set, "**START/+30 SEC./CONFIRM**" is not pressed in 5 minutes. The current time will be displayed. The setting will be cancelled.

(4) The buzzer sounds once by efficient press, inefficient press will be no response.

(5) The buzzer will sound five times to remind you when cooking is finished.

13. Auto Menu

1) In waiting state, turn "  " right to choose the function wanted, and "A1", "A2", "A3"... "A10" will be displayed.

2) Press " **START/ +30 SEC./CONFIRM**" to confirm the menu you need.

3) Turn "  " to choose the weight of menu, and "g" indicator will light.

4) Press "**START/ +30 SEC./CONFIRM**" to start cooking.

Note: When you choose A8 cake, please do not put the cake into the oven at the beginning.

The oven needs to be preheated to 160 degree first. After several minutes, the buzzer sounds twice to remind you to put the cake into the oven. After putting the cake in the oven, please press start again. The timer will count down, and the cake will be cooked perfectly.

14. Calorie meter

In Auto Menu Mode, during cooking also, if you press "**Calorie Meter**" Corresponding Calorie value will be displayed for 2-3 sec.

NOTE: These Nutritional details are an estimate and should only be used as a guide for approximation.

14. Calorie meter

123 Easy Menu Chart

Menu	Weight /Qty	Total Calories
A-1	1	64
Coffee/Soup	2	128
	3	192
A-2	100 gm	64
Popcorn		
A-3	8	320
IDLI /DHOKLA		
A-4	100 gm	N.A.
Auto Reheat	200 gm	
	300 gm	
	400 gm	
	500 gm	
A-5	200 gm	128
Boiled Potato	300 gm	192
A-6	250 gm	320
Bhindi masala	500 gm	480
A-7	200 gm	170
Mutter Paneer	400 gm	340
	600 gm	510
	800 gm	680
A-8	200 gm	400
Sprouts (moong)	300 gm	600
A-9	150 gm	500
Steamed rice		
A-10	150 gm	880
Veg Pulav		
A-11	50 gm	185
Boiled Dal	100 gm	370
	150 gm	555
A-12	200 gm	200
Veg Au-Gratin	400 gm	400
	600 gm	600
	800 gm	800
A-13	150 gm	640
Suji halwa		
A-14	250 gm	340
Mushroom cheese masala	500 gm	680
A-15	2	630
Grilled Sandwich		
A-16	800 gm	880
Grilled whole chicken	1000 gm	1100
	1200 gm	1320
A-17	200 gm	460
Grilled chicken wing	300 gm	690
	400 gm	920
	500 gm	1150
	600 gm	1610
	700 gm	1840
A-18	200 gm	440
Grilled chicken pieces	300 gm	660
	400 gm	880
	500 gm	1100
	600 gm	1540
	700 gm	1760

Menu	Weight /Qty	Total Calories
A-19	200 gm	460
Grilled chicken legs	300 gm	690
	400 gm	920
	500 gm	1150
	600 gm	1380
A-20	100 gm	120
Grilled fish pieces	200 gm	240
	300 gm	360
	400 gm	480
	500 gm	600
A-21	250 gm	300
Tandoori fish	500 gm	600
	750 gm	900
	1000 gm	1200
A-22	1	1000
PIZZA		
A-23	1	3500
Vanilla cake		
A-24	1	3800
Chocolate Cake		
A-25	1	3600
Fruit cake		
A-26	1	3500
Black Forest Cake		
A-27	1	3400
Chocolate Cookies		
A-28	1	3500
Custard Cookies		
A-29	1	690
Apple Jam		
A-30	1	3100
SPONGE CAKE		
A-31	250	1200
GAJAR HALWA		
A-32	4	1520
Kesar Kheer		

NOTE : These Nutritional details are an estimate and should only be used as a guide for approximation.

Auto Menu No.	MENU	Wt ./ Qty /Serves	Total Calories
SOUPS AND SNACKS			
A-33	Cream of Tomato Soup	4 Cups	580
A-34	Cream of Green Peas Soup	4 Cups	648
A-35	Cream of Mushroom Soup	4 Cups	520
A-36	Sweet Corn Soups	4 Cups	640
A-37	Sweet Corn Chicken Soups	4 Cups	680
A-38	Veggi Pizza	1	1,000
A-39	Chicken Hawaiian Pizza	1	1,400
A-40	Cheese Chili Toast	4	1,560
A-41	Veg. Cutlet	8	880
A-42	Maggi	1	600
HEALTH FOOD FOR KIDS			
A-43	Poushtik Khichadi	150 gm	1,120
A-44	Mix Fruit Jam	1	600
A-45	Dhoodhi Halwa	250 gm	1,200
A-46	Sabudana Kheer	250 ml	500
A-47	Coconut Phirni	300 ml	1,200
A-48	Moti Pulav	150 gm	1,180
MOTHERS MENU			
A-49	Imli Ki Chutney	250 gm	630
A-50	Cream of Spinach soup	4	500
A-51	Apple Stew	250 ml	200
A-52	Apple Carrot Kheer	300 ml	560
A-53	Palak Rice	150 gm	800
A-54	Veggi Dalia	4 serves	880
A-55	Sponge Wheat Cake	12 serves	2640
SOUTH INDIAN MENU			
A-56	Tomato Rice	150 gm	1,060
A-57	Pumpkin Sambar	4 serves	560
A-58	Veg. with coconut curry	250 gm	693
		500 gm	993
A-59	Fish Curry	250 gm	360
		500 gm	720
A-60	Tomato Rasam	4 serves	200
A-61	Lemon Rice	4 serves	920
A-62	Avial	250 gm	640

Auto Menu No.	MENU	Wt ./ Qty /Serves	Total Calories
MAHARASHTRIAN MENU			
A-63	Veg Kolhapuri	250 gm	600
		500 gm	1,200
A-64	Coconut Rice	150 gm	1,800
A-65	Masala Rice	150 gm	1,440
A-66	Stuffed Capsicum	250 gm	760
		500 gm	1,140
A-67	Seviyan Kheer	4 serves	2000
A-68	Veg Kalvan	250 gm	640
A-69	Rice Kheer	4 serves	1,400
A-70	Upma	4 serves	1,160
PUNJABI MENU			
A-71	Khoya Matar	250 gms	1,420
A-72	Keema Matar	250 gms	1,140
A-73	Methi Matar Malai	250 gms	600
A-74	Mutton Kurma	250 gms	1,060
A-75	Veg Makhanwala	250 gms	880
		500 gms	1,320
A-76	Paneer Makhani	250 gms	1,600
A-77	Navratna kurma	250 gms	1,820
A-78	Paneer Masala	250 gms	1,700
NORTH INDIAN MENU			
A-79	Sweet Kesari Rice	150 gms	1,240
A-80	Rawa Masala Idli	8 pieces	360
A-81	Dry Gobi	250 gms	388
		500 gms	582
A-82	Dry Cabbage	250 gms	380
GUJARATHI MENU			
A-83	Makai Ni Khichdi	250 gms	440
A-84	Gujrathi Kadhi	4 serves	300
A-85	Aam Ki Chutney	250 gms	1,050
A-86	Sev Tamato Curry	4 serves	1100
A-87	Moong Dal Ni Khichdi	150 gms	1120
RAJASTHANI MENU			
A-88	Gatta Kadi	4 serves	1200
A-89	Gatta Ka Pulav	150 gms	1,160
A-90	Baingan Masala	250 gms	720
		500 gms	1,440
A-91	Chicken Masala	250 gms	1,000
		500 gms	2,000
A-92	Pyaz ki Subzi	4 serves	520

Auto Menu No.	MENU	Wt ./ Qty /Serves	Total Calories
BENGALI MENU			
A-93	Mustard Chiken	250 gms	300
		500 gms	450
A-94	Prawn Malai Curry	250 gms	800
		500 gms	1,200
A-95	Bhapa Mach	250 gms	564
		500 gms	750
A-96	Chholar Dal	4 serves	1160
A-97	Pudina Fish	250 gms	400
		500 gms	600
A-98	Shukto	250 gms	600
A-99	Tomato chutney	250 gms	480
MAIN COURSE.			
A-100	Green Peas Pulav	150 gms	1,032
A-101	Makai Shorba	4 serves	652
A-102	Khumbh ki Sabzi	250 gms	240
		500 gms	360
A-103	Butta Simla Mirch Rice	150 gms	1,112
A-104	Khumbh Ki Biryani	150 gms	960
A-105	Acharya Khichdi	150 gms	1,120
A-106	Sabz Biryani	150 gms	1,192
A-107	Mix Veggi Curry	250 gms	260
		500 gms	390
INTERNATIONAL MENU			
A-108	Thai Red Curry	250 gms	400
A-109	Thai Green Curry	250 gms	640
A-110	Thai Cauliflower curry	250 gms	336
		500 gms	672
A-111	Thai Fish Curry	250 gms	1,000
		500 gms	1,230
A-112	Mexican Rice	150 gms	1,060
A-113	Mexican Hot Chocolate	4 serves	600
A-114	Nachos	4 serves	1,200
A-115	Mexican Spicy Corn	2 serves	640
DESSERTS			
A-116	Apple Pudding	4 serves	904
A-117	Fruit Custard Pudding	4 serves	780
A-118	Phirni	4 serves	900
A-119	Fruit Punch	4 serves	300
A-120	Payasam	4 serves	1100
A-121	Mix Fruit Pudding	4 serves	700
A-122	Orange Kheer	4 serves	940
A-123	Basundi	4 serves	740

SPECIAL FEATURES

1. Glowing Button Guide

The Glowing Buttons guide you to the Next buttons to be or which can be pressed
Once u enter any mode , the next buttons which can be operated , Start Glowing .

2. Mobile Enabled Recipes

Now with this You can view the 123 Auto menu Recipes on your MOBILE !!!
You just have to Download a small Mobile Software ,only ONCE .

1. From your GPRS Enabled ,GSM Mobile Just send an SMS , **ONIDA** to 57333
2. You shall recive a Link in reply sms .
3. Click on this link & Follow the steps as displayed .
4. With this a Small mobile software ,will be loaded on ur mobile .
5. Now you can view the recipes any time on your mobile!!!

3. Keep Warm

This mode is usefull to keep freshly prepared food , Warm for longer time .
To activate this , Set Auto menu no 124.
* Max time in the mode is 2 Hrs.

4. Deodorize

Deodorize function help you to Remove the foul odors from the oven

1. Set Auto Menu A-125
2. Default time : 10 min
3. You can Increase time to max 60 Min.

5.Steam Cleaning

Use This feature to Clean the cavity regularly .

1. In a Microwave safe Flat bowl , Fill 200ml of water .
2. Add Vinegar /Lemon juice in water
3. Place in oven
4. Set Auto Menu A-126
- 5.When over , swipe the Cavity with soft & clean napkin .

6. Eco-Friendly Power Saving Mode

With SMPS Technology , This product Consume's 50% less Power in Standby mode.

SPECIFICATIONS

Power Consumption : 230V~50Hz, 1450 W (Microwave)
1600 W (Convection) ,Max 2900W
1300 W (Grill)

Rated Microwave Power Output : 900 W

Model No. :

Power Supply	Market	Model Code
1 P.H.,230V~50Hz	INDIA	MO 30 BJS 11B
1 P.H.,230V~50Hz	EXPORT	MO 30 BJS 11B X1
1 P.H.,220V~60Hz	EXPORT	MO 30 BJS 11B X2

Operation Frequency : 2450 MHz

Packaging Dimensions : 583mm (L) X 543mm (W) X 381mm (H)

Unit Dimensions : 520mm (L) X 513mm (W) X 325mm (H)

Oven Capacity : 30 Litres

Cooking Uniformity : Turntable System {F315mm}

Net Weight : Approx. 20.2 Kgs.

Gross Weight : Approx. 22.7 Kgs.

MAINTENANCE : Trouble Shooting

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the oven without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to Cleaning & Care to clean dirty parts.

WARRANTY TERMS AND CONDITIONS

M/S. **MIRC ELECTRONICS LTD**, WARRANTS THIS ONIDA MICROWAVE OVEN TO THE ORIGINAL PURCHASER TO BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP WITHIN ONE YEAR FROM THE DATE OF PURCHASE AS PROVIDED IN THE WARRANTY REGISTRATION CARD.

This warranty is subject to terms and conditions as mentioned below:

1. This warranty shall be valid only for the said period of 12 months as specified above, irrespective of whether the said unit has been in use or not for any reason whatsoever, or the unit is moved from one location to another. Warranty does not cover accessories external to the equipment.
2. The warranty period specified above shall include time taken for repairs, replacements, break-downs, transit time etc. No notice of expiry period of warranty will be given by the company.
3. This warranty shall stand automatically terminated in the event of the said unit being serviced, repaired, installed, de-installed, re-installed or otherwise attended to by any person or organization or agency or by the said purchaser himself other than the authorized representative of the company.
4. Parts of the unit replaced or repaired under the terms of this warranty are warranted only for the remaining period of the original warranty period.
5. For attending any service call under this warranty beyond the municipal limits of the locality in which the authorized representative/dealer is situated (outstation locations), all to and fro travelling and other incidental expenses as prevailing from time to time incurred in connection with the visit of the service personnel, technicians, etc shall be borne by the said purchaser and shall be payable in advance. Additionally, all expenses incurred by the authorized representative /dealer in collecting the said unit or any part thereof from such outstation locations and its return to the original location shall be borne by the said purchaser.
6. In the event of any change in the location of the unit during the warranty period, this warranty shall become null and void unless the fact of the proposed change is communicated in writing to the authorized dealer at least seven (7) days prior to the said change. On receipt of such information the authorized dealer or any of its counterparts shall arrange for de-installation of the said unit on chargeable basis. However, in the event of any damage occurring to the unit or to any of its parts during the course of its transit by the said purchaser, repair or replacement, the said unit or any part thereof damaged shall not be covered by this warranty.

7. It shall be the absolute discretion of the company to a) effect the repairs or replacement of parts whether at the site of installation or at any service centre, and b) have the job attended to either by the Company's service personnel or its authorised dealer.
8. This warranty is in the nature of and for the purpose of set forth herein above and in particular the Company shall not in any event be liable for direct, indirect, incidental or consequential loss or damages to either the said purchaser and /or his property or any other third party.
9. The purchaser should preserve the original invoice for necessary verification and produce, as and when required.
10. Warranty null and void if:
 - i. The Microwave Oven is not purchased from the authorized dealers of the company.
 - ii. The Service Centre copy of warranty card is not received within 10 days of date of purchase at the nearest Authorized Service Centre.
 - iii. Any damage is caused by accident, mishandling, tampering with installation, or negligence in following instructions of the user manual issued by Company.
 - iv. Any damage is caused by improper electrical circuit outside the unit or by any defective electrical supply
 - v. At any time, during the warranty period if any part of the unit is tampered with, altered, repaired or serviced by any unauthorized person, not being the authorized representative of the company or its authorized dealers
 - vi. The serial number of the unit or any part thereof is damaged, defaced, altered, obliterated, or tampered with or removal for any reason whatsoever
 - vii. Do not install oven over a range cooktop or other heat-producing appliance. If installed could be damaged and the warranty would be void.
11. None of the employees and /or Authorized Dealers of the Company have any authority whatsoever to vary the terms and conditions of this warranty.
12. This warranty shall be deemed to have been issued at Mumbai, state of Maharashtra & courts at Mumbai shall have exclusive jurisdiction on matters covered by or following from this warranty, and the original purchaser alone shall have cause of action arising out of the transaction.

Tear it, Fold it, Send it to Adonis

Serial No.

Service Centre Copy**MIRC Electronics Limited
Warranty Registration Card**

ONIDA

Customer Details

Title: Mr ☐ Ms ☐ Mrs ☐ M/s ☐

Name:

Residence Address:

Dist: Pin:

State: Occupation:

Tel: () Res: () Fax:

Code Code

Mobile No: Email:

Fold - 2

Product Details

Please Tick The Appropriate Product Colour TV ☐ B&W TV ☐ DVD ☐ Washing M/C. ☐ AC ☐ Plasma TV ☐ Rear Projection TV ☐

Microwave Oven ☐ LCD TV ☐

Model No: Serial No

Please Refer Sticker On Back Cover Of Your Product

Purchase Date

Day Month Year

Bill No. **Dealer's Name & Address**

Signature

I Accept The Terms And Conditions of The Warranty

Customer Signature

Fold - 1

Thank you for selecting a World Class product and we assure you that it will perform as per your expectations

We thank you for taking your time to complete this form. All Information Provided by You will be Kept Confidential.

(Please Fill In, Tear off, Fold and Mail this form to Reach us within 10 days of the Product Purchase.)

We welcome your Valuable Suggestions, if any, to Improve our Products and Services :**FOR OFFICE USE ONLY**Customer Code: Branch: **Mirc Electronics Ltd.**

Note: Company Will Not Be Responsible For The Loss Of This Form During Transit.

For Other Details on Our Products & Services Log On To www.onida.com

BUSINESS REPLY ENVELOPE

ONIDA

ADONIS ELECTRONICS P.LTD.
Onida Customer Relation Centre
Onida House II, Mahal Indl.Est.,Nr.Paper Box,
Off.Mahakali Caves Rd., Andheri (E),
Mumbai 400093. Maharashtra
INDIA.

Serial No.

MIRC Electronics Limited
Warranty Registration Card

ONIDA

Customer Copy

Customer Details

Title: Mr ☐ Ms ☐ Mrs ☐ M/s ☐
Name:
Residence Address:
Dist: Pin:
State: Occupation:
Tel:() Res: () Fax:
Code Code
Mobile No: Email:

Product Details

Please Tick The Appropriate Product Colour TV ☐ B&W TV ☐ DVD ☐ Washing M/C. ☐ AC ☐ Plasma TV ☐ Rear Projection TV ☐
Microwave Oven ☐ LCD TV ☐

Model No:

Serial No

Please Refer Sticker On Back Cover Of Your Product

Purchase Date
Day Month Year

Bill No.

Dealer's Name & Address

Signature

I Accept The Terms And Conditions of The Warranty

Customer Signature

Thank you for selecting a World Class product and we assure you that it will perform as per your expectations

We thank you for taking your time to complete this form. All Information Provided by You will be Kept Confidential.

(Please Fill In, Tear off, Fold and Mail this form to Reach us within 10 days of the Product Purchase.)

We welcome your Valuable Suggestions, if any, to Improve our Products and Services :

FOR OFFICE USE ONLY

Customer Code:

Branch:

Mirc Electronics Ltd.

Note: Company Will Not Be Responsible For The Loss Of This Form During Transit.

For Other Details on Our Products & Services Log On To www.onida.com

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions, this is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly & any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the microwave oven and possibly result in a hazardous situation.
12. Please do not dispose this appliance into the domestic rubber bin; it should be disposed to the particular disposal center provided by the Municipal authorities.

List of Service Centre nos. In India

State	Service Number
Andhra Pradesh	040-39889000
Delhi	011-39889000
GOA	022-39889000
Gujarat	079-39889000
Haryana	0172-3988900
Karnataka	080-39889000
Kerala	0484-3988900
Madhya Pradesh	0731-3988900
Maharashtra	022-39889000
Punjab	0172-3988900
Rajasthan	0141-3988900
Tamilnadu	044-39889000
Uttar Pradesh	0522-3988900
W Bengal	033-39889000
Bihar	1800 30099000
Chattisgarh	1800 30099000
Himachal Pradesh	1800 30099000
Jharkhand	1800 30099000
Orrisa	1800 30099000
Uttaranchal	1800 30099000
Assam-Guwahati	0361-2413138 / 2413158
Assam-Jorhat	0376-2309008
Jammu & Kashmir- Jammu	0191-2562258

Overseas-Middle East Asia

UNITED ARAB EMIRATES : M/s Al Futaim Electronics, DUBAI .U.A.E.Tel : +971 4 6090760 Fax: +971 4 2832590,
 OMAN : M/s Mohsin Haider Darwish, P.O.Box : 880, PC 112-RUWI, OMAN Tel : +968 24 703411 Fax : +968 24 798662
 QATAR: M/s Videohome & Electronics Centre, P.O.Box : 4668, DOHA-QATAR, Tel : +974 4410060 Fax : +974 44373876
 BAHRAIN: M/s Kewalram & Sons P.O.Box : 84, Manama BAHRAIN Tel : +973 17 210617 Fax : +973 17 210627
 KUWAIT: M/s Sefeena Gen Trading & Cont Est, P.O.Box : 5610, Safat:13057 KUWAIT Tel : +965 2456293 Fax : +965 2456297
 KINGDOM OF SAUDI ARABIA: M/s Said Ahmed El-Ajou Trading Corp.LLC, Tel: +966 2 2830923, Fax : +966 22830924